

Usage

Rain Shower / Handheld Shower Switch


Turn the switch to the "Top shower" symbol for rain shower mode.

Turn the switch to the "Hand shower" symbol for handheld shower mode.

Temperature Control

The symbol "H" stands for hot water, and "C" stands for cold water.

You can adjust the temperature by turning the handle toward the H or C side.

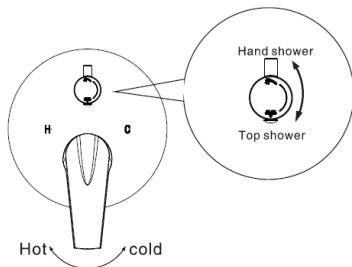


Cleaning and Maintenance

To keep your shower system looking its best, we recommend cleaning it regularly.


Please follow the steps below when cleaning the mixer:

1. Use clear water and a soft cloth to remove surface dirt.
 2. Use one of the following gentle cleansers:
 - Mild liquid detergent
 - Colorless cleanser
 3. After cleaning, thoroughly rinse off all cleanser and dry with a soft cotton cloth.
- Avoid using polishing powders or cleaners containing coarse particles.
 - Avoid using acidic detergents.


INSTRUCTION MANUAL CONCEALED SHOWER

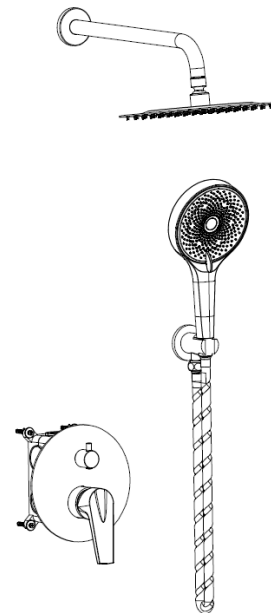

 LOMAZOO

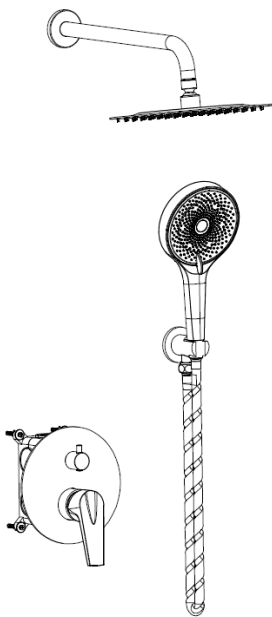

Installation Handled Shower Head

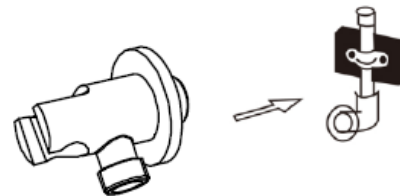


1. Wrap Teflon tape around the threads of the connector, then screw it directly into the water pipe inside the wall.


2. Connect the handheld shower and the bracket holder using the hose. Make sure the rubber gaskets are properly placed inside the hose.



Installation Main Shower Head

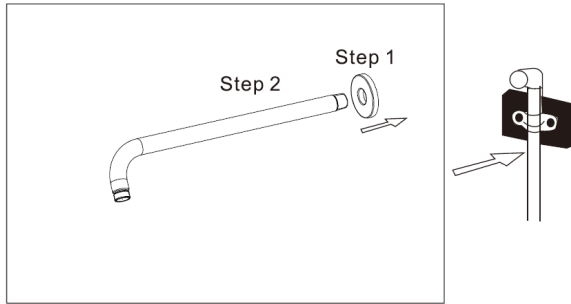

1. Slide the decorative cover onto the shower arm.
2. Screw the shower arm into the wall fitting.

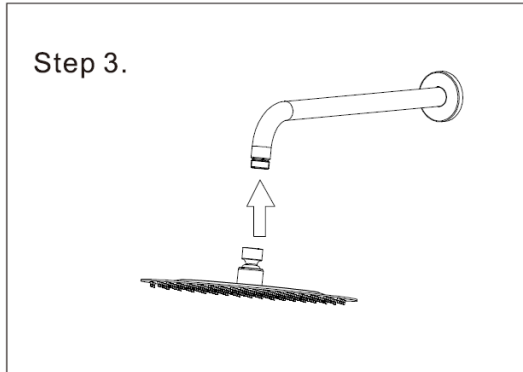

3. Attach the rain shower head to the shower arm.

Before installation

Thank you for choosing our Concealed Shower System. We hope you enjoy a smooth and comfortable shower experience with this product. Before installation, please read this manual carefully and keep it for future reference if needed.

This manual provides installation and usage instructions for the Concealed Shower System.

Technical Requirements

- The proper water pressure should be between 0.1 MPa and 1.0 MPa. If it exceeds 1.0 MPa, a pressure-reducing valve must be installed.
- Clean any impurities and sludge from the hose before installation to prevent blockages or leaks.
- This shower system must be installed inside the wall. Please read this manual carefully to confirm the product dimensions and ensure correct placement on the wall.
- The inlet and outlet pipe threads must be wrapped with Teflon tape. Wrap the tape a few turns clockwise around the threads. (This is very important. The tape must be wound clockwise—otherwise, it may leak.)
- Turn off the water supply before installation.

Installation Tools To Be Needed



Adjustable wrench



Hexagon wrench
(included)



Phillips Screwdriver



Pipe Tape



Glue




Electric drill


Package Contents




Nr.	Accessories	Quantity
1	304 Stainless Steel Rain Shower Head	1
2	Brass Rain Mixer Valve Control	1
3	Three Function Handheld	1
4	Stainless steel Shower Hose with 2 Rubber Gaskets inside	1
5	Stainless Steel Wall Mounted Shower Arm With Screws	1
6	Brass Bracket Holder With Screws	1
7	Stainless Steel Panel	1
8	Decorative Cover	2
9	Embedded Box Cover	1
10	Embedded Box	1
11	Handle	1
12	White Screws for Fixing the Embedded Box	4
13	Screws for Fixing the Embedded Box	4
14	Small Covers	2
15	"L" Shape Tool	1
16	Large Hexagonal Screws for ② and ⑪	2
17	Teflon Tape	1

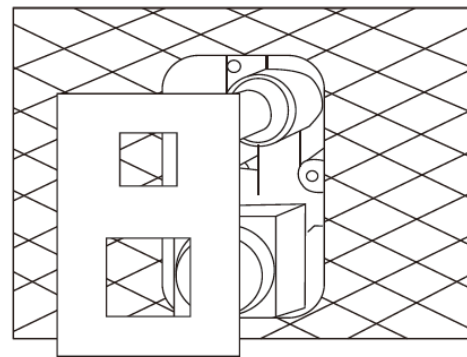

Step 1

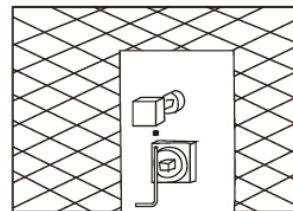

Step 2

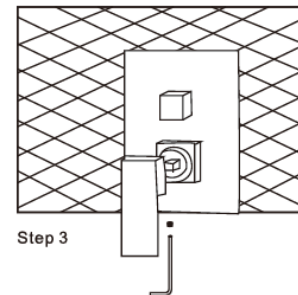


Step 3


Step 1: Cover the mixer body with panel ⑦.

Step 2: Secure the Rain Mixer Valve Control ② using a hexagonal screw ⑮ and a small cover ⑯.


Step 3: Secure the Single Lever Handle ⑪ using a hexagonal screw ⑮ and a small cover ⑯.

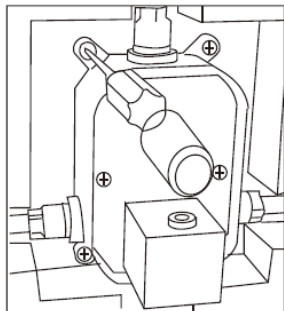


Step 5: Fix the embedded box to the wall using four screws ⑨.

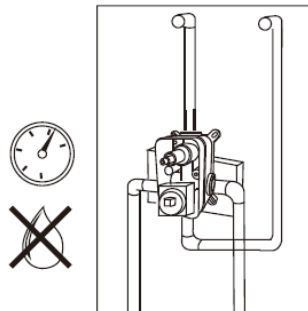

Step 6: Remove the protective cover ⑨ from the valve control. Then, with the help of the handle, perform a pressure test on each inlet and outlet pipe to ensure there are no leaks.

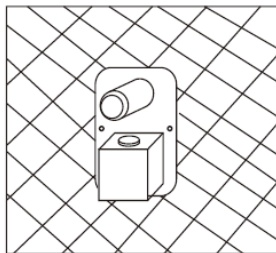


Step 7: The embedded box cover ⑨ protects the box from dust. Reattach the cover and wait for the wall to be tiled.


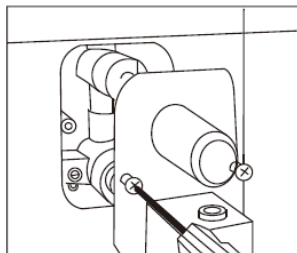


Step 8: After the wall has been tiled, remove the cover from the embedded box.


Product dimensions

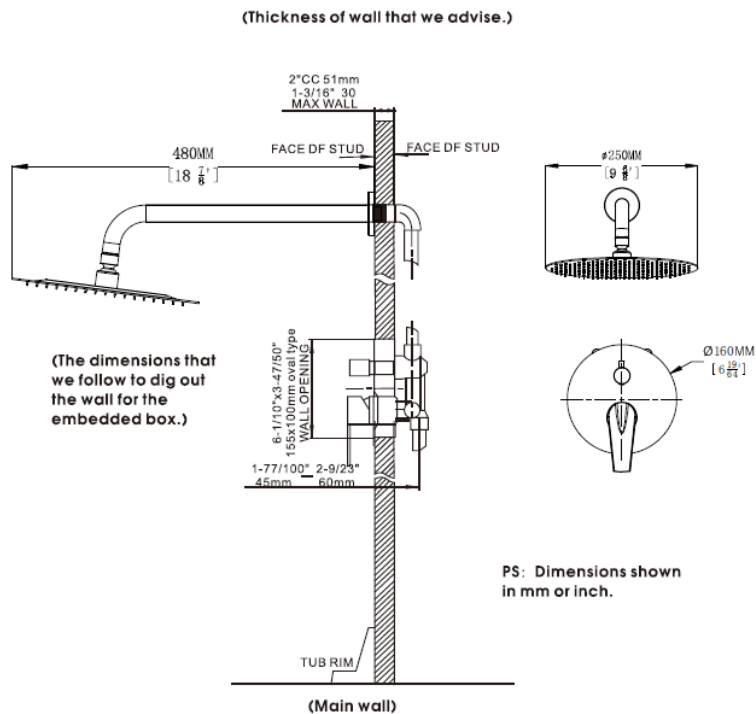


Installation of Concealed shower mixer valve

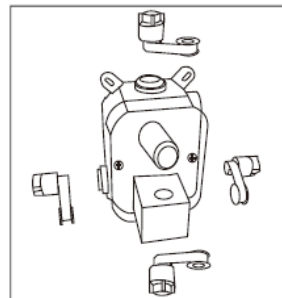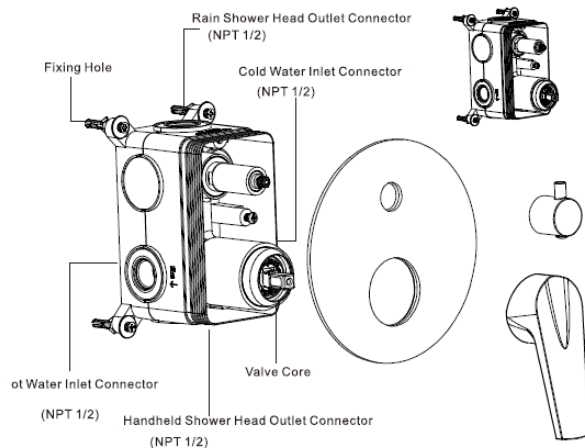


Step 1: Wrap Teflon tape around the threads of the inlet and outlet pipes. Make a few turns clockwise to ensure a tight seal.

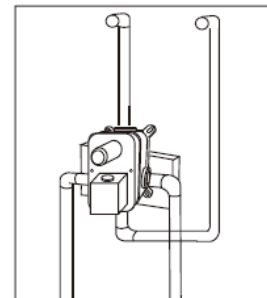

Step 2: Connect the water pipes to the embedded box ⑩.

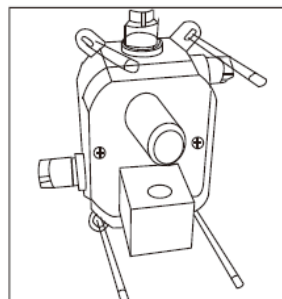

Step 3: Determine the final position of the embedded box and the connected pipes. Mark the positions on the wall.

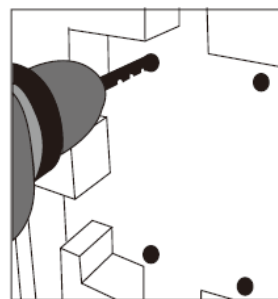

Step 4: Mark the pipe routes and remove the embedded box. Drill the holes, then use an electric drill to insert the white screws ⑬ into the wall with an electric drill.